 
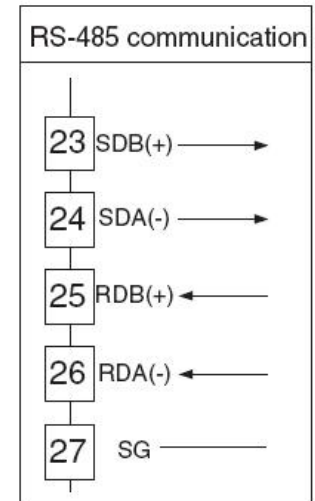 
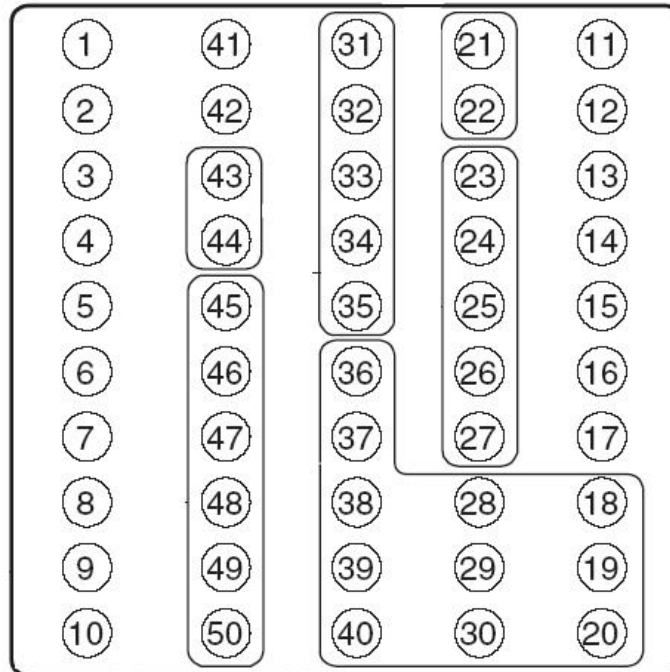 


## Yokogawa UT550-12

### Position proportional control output

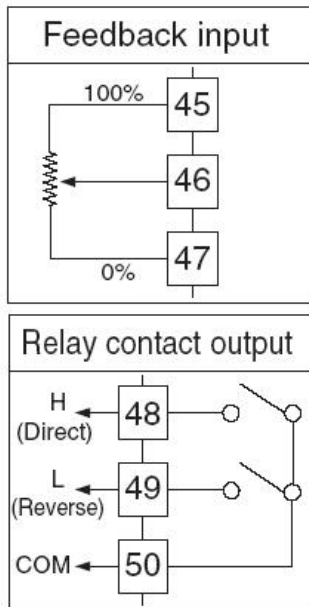

These communications setup parameters which must be changed from the Yokogawa defaults:

Parameter Symbol	Name of Parameter	Setting Range and Description	Initial Value	Kitel
<b>rns</b> (RMS)	Remote input selection	RSP (1): Uses the value set remotely via remote input (terminals). COM (0): Uses the value set remotely via communication.	RSP (1)	<b>COM</b>
<b>nod</b> (MOD)	Remote/Local switching	Set to "Local" when carrying out control using the target setpoints of the controller or to "Remote" when using target setpoints acquired via a remote input signal or communication. Use the setup parameter RMS, "Remote Input Selection," to determine whether the target setpoints should be acquired via the remote input signal or communication. REM (1): Remote mode LCL (0): Local mode	LCL (0)	<b>REM</b>